




HYDRO-BIOS

Smart Sampling

Datasheet V-Fin Depressor 5kg (438 417)

V-Fin Depressor 5kg

The V-Fin Depressor gives negative lift to the towing rope during horizontal or oblique plankton net operation. This also stabilises the net in the water and allows for good sampling results. It consists of a lead-weighted body and a stainless steel rope with shackle.

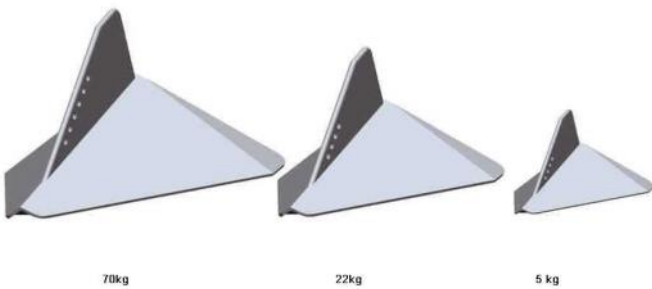

TECHNICAL DETAILS

length	380mm
width	400mm
height	250mm
weight on air	5kg
materials	anodized aluminium, lead
product ID	438 417