




HYDRO-BIOS

Smart Sampling

Datasheet V-Fin Depressor 70kg (438 418)

V-Fin Depressor 70kg

The V-Fin Depressor gives negative lift to the towing rope during horizontal or oblique plankton net operation. This also stabilises the net in the water and allows for good sampling results. It consists of a lead-weighted body and a stainless steel rope with shackle.

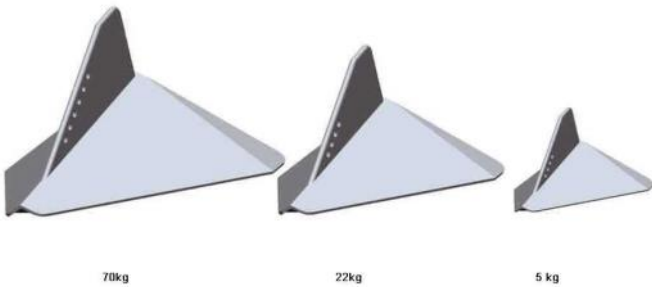

TECHNICAL DETAILS

length	1100mm
width	1000mm
height	800mm
weight on air	70kg
materials	anodized aluminium, lead
product ID	438 418